



The connection between the machine and the pc is lost

1. Check if the pc and the machine are correctly connected with a CAT 6A ethernet cable in good working condition.
2. Check if the pc is still configured with the correct fixed IP-address (172.22.2.101).
In the search bar at the bottom of your screen type: network status.
3. You will end up in a page in which you can select "Ethernet".
4. You will see your Ethernet connections and you can change the adapter options.
5. A window will open with your Ethernet connection. Move your mouse cursor on this connection, right click and select Properties.
You will see the following window:

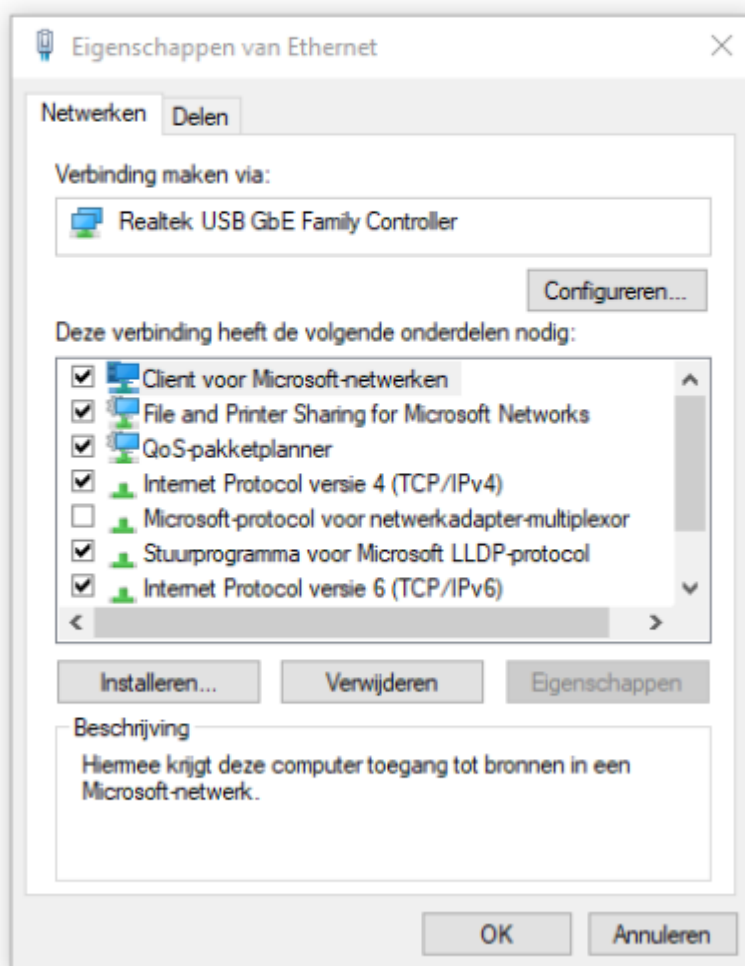

6. Select "Internet Protocol versie 4 (TCP/IPv4)" and click once on that. Click on "Properties".
You will see the following window:

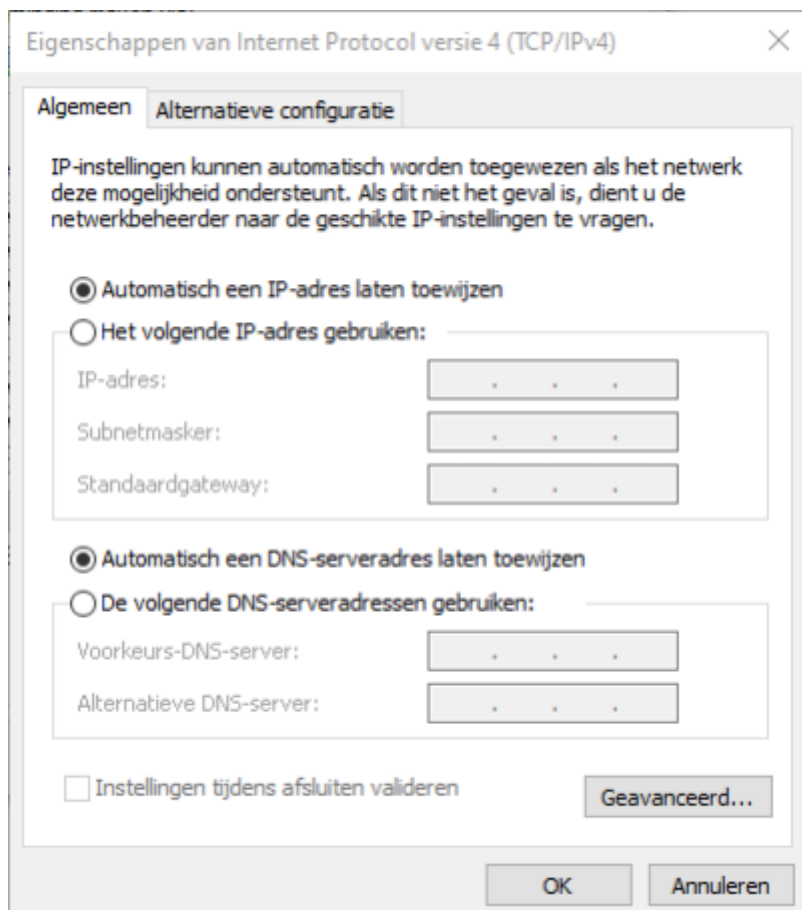

7. Now click on “use the following IP-address:” and type: **172.022.002.101**.
The Subnet mask has to be: **255.255.255.0**.
8. Click OK.
9. The connection with the machine is being made, the pc now has a fixed IP address.

From:
<https://manuals.cyborg-engravers.com/> - cyborg-engravers

Permanent link:
https://manuals.cyborg-engravers.com/doku.php?id=en:faq-troubleshooting:connection_pc-machine

Last update: 2025/04/29 11:53

