

## The Cyborg pendent only shows one tab in the preferences. How do I bring up the other two?

---

\* In the Cyborg Pendent window right click on the “?” in the upper right corner of the window. \* Hold the “Ctrl” and the “Shift” keys of your computer keyboard simultaneously and left click on the option “Preferences”. \* You now have access to the 3 pages in the Preferences window.

From:  
<https://manualscyborg-engraverscom.webhosting.be/> - cyborg-engravers

Permanent link:  
[https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:faq-troubleshooting:pendent\\_settings\\_one\\_tab\\_only&rev=1745918085](https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:faq-troubleshooting:pendent_settings_one_tab_only&rev=1745918085)

Last update: 2025/04/29 11:14

