


Point to point ruler



By clicking on this icon once, you can measure the distance between two points in your layout.

Click on the first point, then click on the second point. A small window will appear showing the distance between the two selected points. After using the ruler, the function will automatically be deactivated.

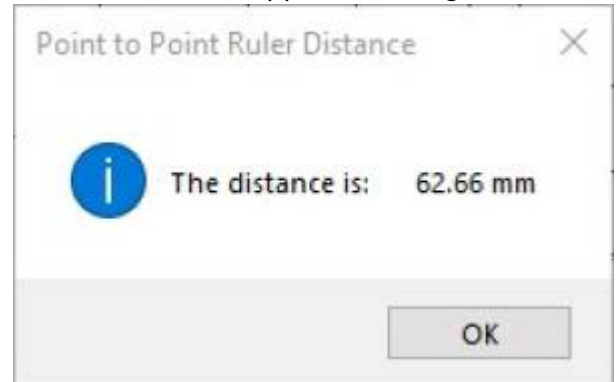

From:

<https://manuals.cyborg-engravers.com/> - **cyborg-engravers**

Permanent link:

https://manuals.cyborg-engravers.com/doku.php?id=en:symmetry:point_to_point_ruler

Last update: **2023/05/17 10:05**

