

# Increase cut speed



This input allows you to increase the machine's XY travel and cut speeds to a maximum of 150%. This affects the feedrate or cut speed when the cutter is moving through the material. When the machine is executing a rapid move, moving above the material, the feedrate override has no effect. The cut speed will be displayed on the Keypad Control Panel as a percentage "%Feed" and as a real speed in "mm/s (XY)". The feedrate override will determine the amount that the cut speed will be adjusted by.



When a file is being executed on the machine pressing the INCREASE CUT SPEED hot key will increase the feedrate in 1% increments.



Holding the INCREASE CUT SPEED hot key increases the feedrate at an increasingly faster rate.

**Return to [the keypad overview](#).**  
**Continue to [the table of contents](#).**

From:

<https://manuals.cyborg-engravers.com/> - **cyborg-engravers**

Permanent link:

[https://manuals.cyborg-engravers.com/doku.php?id=en:x200:increase\\_cut\\_speed\\_key](https://manuals.cyborg-engravers.com/doku.php?id=en:x200:increase_cut_speed_key)

Last update: **2025/04/22 09:13**

