

Jogging the spindle

	Jog to the left (X-) and to the back (Y+) Press the  key to jog the spindle to the rear, which is moving the table to the front. The jog speed is determined jog speed bar setting.
	Jog to the right (X+) and to the back (Y+) Press the  key to jog the spindle to the left. The jog speed is influenced by the jog speed bar setting.
	Jog to the left (X-) and to the front (Y-) Press the  key to jog the spindle to the right. The jog speed is determined by the jog speed bar setting.
	Jog to the right (X+) and to the front (Y-) Press the  key to jog the spindle to the front, which is moving the table to the back. The jog speed is influenced by the jog speed bar setting.

Use the jog speed bar to change the speed



. Click on the rabbit or on the turtle, or click on the dial.

Return to [the keypad overview](#).

Continue to [the table of contents](#).

From:

<https://manualscyborg-engraverscom.webhosting.be/> - cyborg-engravers

Permanent link:

https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x200:jog_keys&rev=1745313493

Last update: 2025/04/22 11:18

