

Move spindle down



Press and hold the Z-AXIS JOG ARROW  to lower the spindle.

Use the jog speed bar to change the speed . Click on the rabbit or on the turtle, or click on the dial.

Return to [the keypad overview](#).

Continue to [the table of contents](#).

From:

<https://manuals.cyborg-engravers.com/> - **cyborg-engravers**

Permanent link:

https://manuals.cyborg-engravers.com/doku.php?id=en:x200:lower_spindle_key

Last update: **2025/04/22 10:54**

