

Move to XYZ-coordinate

The MOVE command allows you to enter exact values for X, Y, or Z (0,0,0) where the first entry is X, the second entry is Y, and the third entry is Z. The X, Y, and Z values will reference from the machine's Hard Home position until the SET HOME and SET SURFACE commands have been selected. At that point the X and Y axis will reference from the Set Home position. The Z value will reference from the surface of the material.

To Move To A Specific Location.

Press the MOVE hot key.

Enter the desired value for X from the number pad (50.0 for example).



A screenshot of a software window titled "XYZ Move" with a close button (X) in the top right corner. At the top, there are two buttons: "Move" and "Cancel Move". Below these are three input fields labeled X, Y, and Z. The X field contains the value "50.0", the Y field contains "0.000", and the Z field contains "0.000". The fields have a blue background and white text.

Press ENTER to accept the value.

Enter the desired value for Y from the number pad (-50.0 for example). Press ENTER to accept the value.



A screenshot of the "XYZ Move" dialog box. The X field still contains "50.0". The Y field now contains "-50.0". The Z field still contains "0.000". The "Move" and "Cancel Move" buttons are at the top.

Enter the desired value for Z from the number pad (5.0 for example). Press ENTER to accept the value.



A screenshot of the "XYZ Move" dialog box. The X field contains "50.0", the Y field contains "-50.0", and the Z field now contains "5.0". The "Move" and "Cancel Move" buttons are at the top.

When the coordinates have been entered, click on the **Move** button.



When pushing the **Move** button the machine will move to the new coordinates. If for some reason you do not want to move to the entered coordinates, hit the **Cancel** key.

After the move you will see the new coordinates in the top part of the pendent window:



Return to [the keypad overview](#).
Continue to [the table of contents](#).

From:
<https://manualscyborg-engraverscom.webhosting.be/> - **cyborg-engravers**

Permanent link:
https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x200:move_to_xyz_key&rev=1745316656

Last update: **2025/04/22 12:10**

