

Diagonal parking keys

 + 	Park the spindle in the upper left corner Press the  +  keys to park the spindle in the upper left corner of the engraving table.
 + 	Park the spindle in the upper right corner Press the  +  keys to park the spindle in the upper left corner of the engraving table.
 + 	Park the spindle in the lower left corner Press the  +  keys to park the spindle in the upper left corner of the engraving table.
 + 	Park the spindle in the lower right corner Press the  +  keys to park the spindle in the upper left corner of the engraving table.

Return to [the keypad overview](#).
Continue to [the table of contents](#).

From:

<https://manualscyborg-engraverscom.webhosting.be/> - cyborg-engravers

Permanent link:

https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x200:park_xy&rev=1745316935

Last update:

2025/04/22 12:15

