

Parking keys

 + 	Park the spindle in the rear (= move the table to the front) Press the  +  keys to park the spindle to the rear of the engraving table.
 + 	Park the spindle to the right Press the  +  keys to park the spindle to the right of the engraving table.
 + 	Park the spindle to the left Press the  +  key to park the spindle to the left of the engraving table.
 + 	Park the spindle in the front (= move the table to the rear) Press the  +  key to park the spindle to the front of the engraving table..

Return to [the keypad overview](#).

Continue to [the table of contents](#).

From:

<https://manuals.cyborg-engravers.com/> - cyborg-engravers

Permanent link:

<https://manuals.cyborg-engravers.com/doku.php?id=en:x200:parking>

Last update: 2025/04/22 12:19

