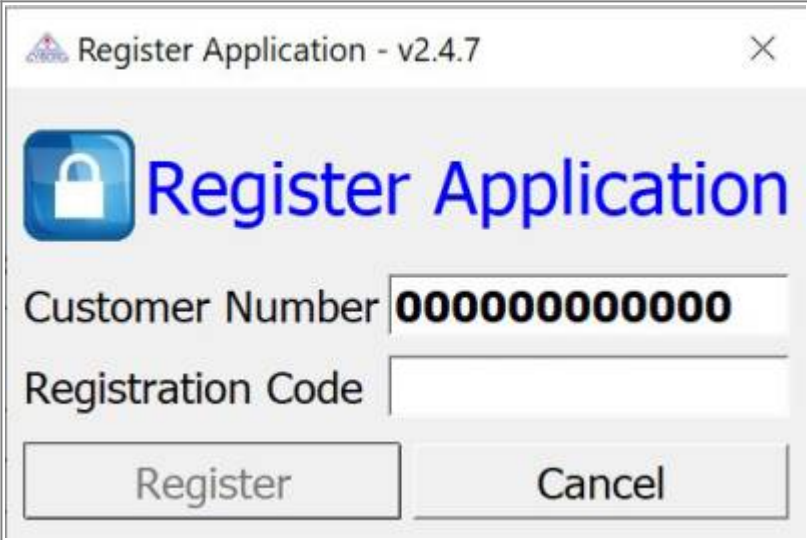
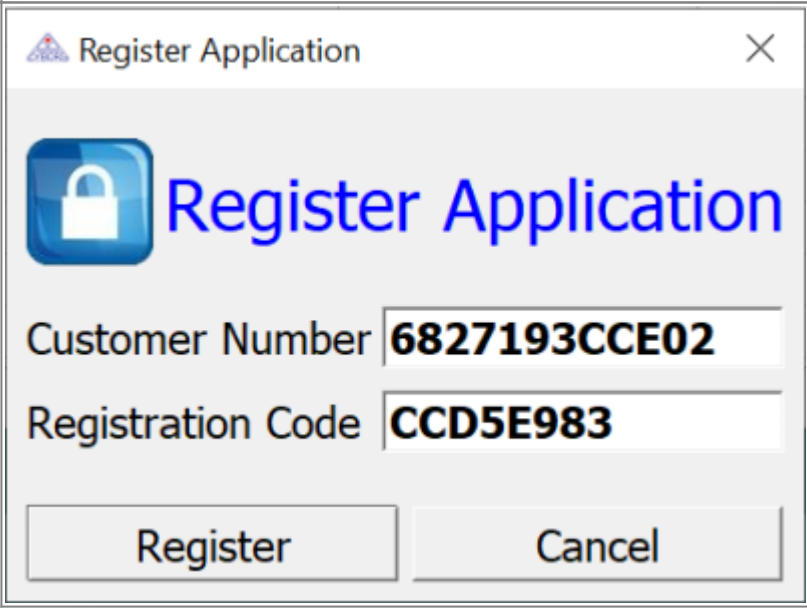


6.1 The Cyborg X200 quick lock vise.

6.1.1. Installing the X200 quick lock vise

The section below shows which steps you have to follow to fix the X200 quick lock vise on the X200 engraving table.

	If a window such as the one here on the left appears then something is wrong with your ethernet connection, or with the ethernet cable, or the X-200 has not been switched on.
	

the machine’s mac address in the “customer number” field. This is a unique code which is linked to the X-200 cnc controller.

On the USB memory stick which was supplied with your machine you will find the release code which you have to type into the “Registration Code” field. Here on the left is an example of an application window with a correct registration code: If your registration code is correct, the virtual software will accept it and release the product.

Last
update: 2025/10/01 14:51 en:x200:quick_lock_vise https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x200:quick_lock_vise&rev=1759323109

From:
<https://manualscyborg-engraverscom.webhosting.be/> - **cyborg-engravers**

Permanent link:
https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x200:quick_lock_vise&rev=1759323109

Last update: **2025/10/01 14:51**

