

Set material surface



This function is used to identify and set the surface of the material.

Before using this key, you have to make sure the spring retainer ring is not locked.

Once the material surface is set you should not have to reset it again unless:

- a) the system has been shut off; or
- b) the material thickness has been changed.

Press the JOG ARROWS keys  to position the cutter anywhere over the material.

Then slowly jog the spindle down  till the nosecone just touches the material. That is where you want the Z-axis setting to be Z=0.0

After that, press the SURFACE  key. This will open the following window:




Here you can still manually move the spindle down  till it just touches the material surface and hit the Enter  key in the set surface window.



Press the JOG ARROWS keys  to position the cutter on the upper left corner of the imaginary rectangle of which you want to scan the relief.

Press the SURFACE  key. This will open the following window:

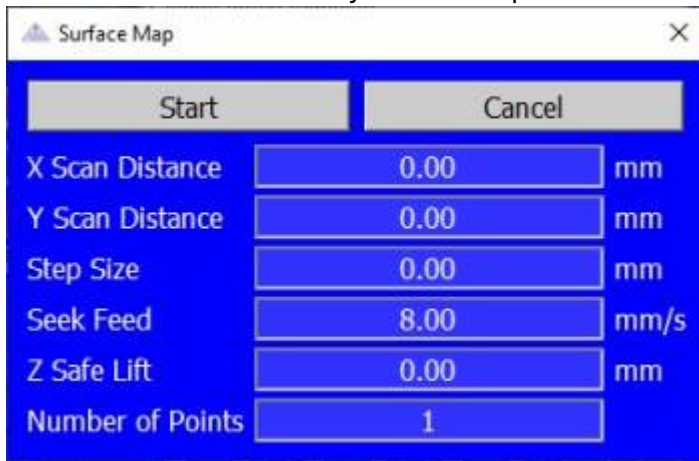

The image shows a software window titled "Surface Map" with a close button (X) in the top right corner. Inside the window, there are two buttons at the top: "Start" and "Cancel". Below these buttons is a list of parameters with input fields and units:

Parameter	Value	Unit
X Scan Distance	0.00	mm
Y Scan Distance	0.00	mm
Step Size	0.00	mm
Seek Feed	8.00	mm/s
Z Safe Lift	0.00	mm
Number of Points	1	

Fill in the data as you like. You can read further information in the bottom part of [this page](#)

Return to [the keypad overview](#).
Continue to [the table of contents](#).

From:
<https://manualscyborg-engraverscom.webhosting.be/> - cyborg-engravers

Permanent link:
https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x200:set_surface_key&rev=1745313049

Last update: 2025/04/22 11:10

