

2.4 Installing the software

Hardware requirements

You can use whichever PC or laptop with a Windows operating system as server for your Cyborg X-200. Your PC has to have:

- a free and working Ethernet port.
- a mouse with at least two buttons and a keyboard.
- a monitor with minimum HD resolution.
- Enough free harddisk space.
- a free USB port.

The operating system

The following Windows versions are supported:

- Windows 11 professional.

The Switch

If the Cyborg X-200 has to be integrated into a LAN (local area network), then the PC needs a second ethernet port, which can be configured into a network switch.

Ga verder naar [configureer de PC ethernet poort](#).

Ga verder naar [de inhoudstafel](#).

From:
<https://manualscyborg-engraverscom.webhosting.be/> - **cyborg-engravers**

Permanent link:
https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x200:system_requirements&rev=1744897007

Last update: **2025/04/17 15:36**

