

## 2.4 Installing the software

### Hardware requirements

You can use whichever PC or laptop with a Windows operating system as server for your Cyborg X-200. Your PC has to have:

- a free and working Ethernet port.
- a mouse with at least two buttons and a keyboard.
- a monitor with minimum HD resolution.
- Enough free harddisk space.
- a free USB port.

### The operating system

The following Windows versions are supported:

- Windows 11 professional (no home or enterprise licenses).

### The Switch

If the Cyborg X-200 has to be integrated into a LAN (local area network), then the PC needs a second ethernet port, which can be configured into a network switch.

**Ga verder naar [configureer de PC ethernet poort](#).**

**Ga verder naar [de inhoudstafel](#).**

From:  
<https://manualscyborg-engraverscom.webhosting.be/> - **cyborg-engravers**

Permanent link:  
[https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x200:system\\_requirements&rev=1744897047](https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x200:system_requirements&rev=1744897047)

Last update: **2025/04/17 15:37**

