

Diagonal jogging keys

**Jog to the left (X-) and to the back (Y+)**

Push the key to jog the spindle to the left and to the rear simultaneously.
The jog speed is determined by the hot key setting.

Jog to the right (X+) and to the back (Y+)

Push the key to jog the spindle to the right and to the rear simultaneously.
The jog speed is influenced by the hot key setting.

Jog to the left (X-) and to the front (Y-)

Push the key to jog the spindle to the left and to the front simultaneously.
The jog speed is determined by the hot key setting.

Jog to the right (X+) and to the front (Y-)

Push the key to jog the spindle to the right and to the front simultaneously.
The jog speed is influenced by the hot key setting.

From:

<https://manualscyborg-engraverscom.webhosting.be/> - cyborg-engravers

Permanent link:

https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x300:jog_xy_keys&rev=1664135756

Last update: 2022/09/25 21:55

