

Diagonal jogging keys



	Jog to the left (X-) and to the back (Y+) Push the key to jog the spindle to the left and to the rear simultaneously. The jog speed is determined jog speed bar setting.
	Jog to the right (X+) and to the back (Y+) Push the key to jog the spindle to the right and to the rear simultaneously. The jog speed is influenced by the jog speed bar setting.
	Jog to the left (X-) and to the front (Y-) Push the key to jog the spindle to the left and to the front simultaneously. The jog speed is determined by the jog speed bar setting.
	Jog to the right (X+) and to the front (Y-) Push the key to jog the spindle to the right and to the front simultaneously. The jog speed is influenced by the hot key setting.

From:
<https://manualscyborg-engraverscom.webhosting.be/> - **cyborg-engravers**

Permanent link:
https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x300:jog_xy_keys&rev=1664136058

Last update: **2022/09/25 22:00**

