

Jog forward / Jog back

The JOG ARROW is used to Jog the location of the spindle and to move through the Menu Items. Press the JOG SPEED key to change the jogging speed.

From:

<https://manualscyborg-engraverscom.webhosting.be/> - **cyborg-engravers**

Permanent link:

https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x300:jog_y_keys&rev=1641475115

Last update: **2022/01/06 14:18**

