

Jog spindle up to the rear



Press and hold the Z-AXIS JOG ARROW  to raise the spindle.

Use the jog speed bar to change the speed



. Click on the rabbit or on

the turtle, or click on the dial.

Return to [the keypad overview](#).

Continue to [the table of contents](#).

From:

<https://manualscyborg-engraverscom.webhosting.be/> - cyborg-engravers

Permanent link:

https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x300:jog_y_keys&rev=1664136492

Last update: 2022/09/25 22:08

