

Jog spindle up to the rear



Press and hold the Y-AXIS JOG ARROW  to jog the spindle to the back.

Use the jog speed bar to change the speed . Click on the rabbit or on the turtle, or click on the dial.

Return to [the keypad overview](#).
Continue to [the table of contents](#).

From:

<https://manualscyborg-engraverscom.webhosting.be/> - **cyborg-engravers**

Permanent link:

https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x300:jog_y_keys&rev=1664136644

Last update: **2022/09/25 22:10**

