

Park spindle in the rear



The PARK Y+ function  +  will move the spindle assembly to the very rear of the engraving table.

Activating Park Y+.

Press the SHIFT  key and then the Y+-AXIS ARROW  to park the spindle in the rear of the engraving table.

Keypad status bar displays:
"Parking ..."

Return to [the keypad overview](#).
Continue to [the table of contents](#).

From:

<https://manuals.cyborg-engravers.com/> - cyborg-engravers

Permanent link:

<https://manuals.cyborg-engravers.com/doku.php?id=en:x300:koppeling>

Last update: **2023/05/17 10:05**

