

Park spindle in the rear left corner



The PARK Y+ function  +  will move the spindle assembly to the very rear of the engraving table.

Activating Park Y+.

Press the SHIFT  key and then the X-Y+-AXIS ARROW  to park the spindle in the rear left corner of the engraving table.

Keypad status bar displays:

“Parking ...”

Return to [the keypad overview](#).

Continue to [the table of contents](#).

From:

<https://manualscyborg-engraverscom.webhosting.be/> - cyborg-engravers

Permanent link:

<https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x300:koppeling&rev=1664138294>

Last update: 2022/09/25 22:38

