


Park spindle in the rear

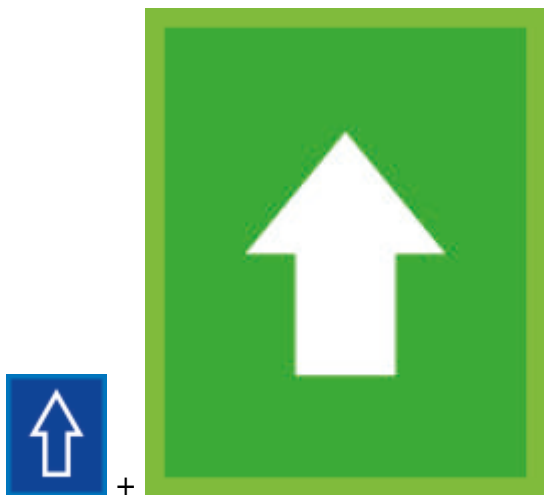

The PARK Y+ function  +  will move the spindle assembly to the very rear of the engraving table.

Activating Park Y+.

Press the SHIFT  key and then the X-Y+-AXIS ARROW  to park the spindle in the rear left corner of the engraving table.

Keypad status bar displays:

“Parking ...”

Return to [the keypad overview](#).

Continue to [the table of contents](#).

From:

<https://manualscyborg-engraverscom.webhosting.be/> - **cyborg-engravers**

Permanent link:

<https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x300:koppeling&rev=1664138496>

Last update: **2022/09/25 22:41**

