

Lower the spindle

Press and hold the Z-AXIS JOG ARROW to lower the spindle.

Press the JOG SPEED key to change the jogging speed.

From:

<https://manualscyborg-engraverscom.webhosting.be/> - **cyborg-engravers**

Permanent link:

https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x300:lower_spindle_key&rev=1641475115

Last update: **2022/01/06 14:18**

