

Move spindle down



Press and hold the Z-AXIS JOG ARROW  to raise the spindle.

Use the jog speed bar to change the speed . Click on the rabbit or on the turtle, or click on the dial.

Return to [the keypad overview](#).
Continue to [the table of contents](#).

From:
<https://manualscyborg-engraverscom.webhosting.be/> - **cyborg-engravers**

Permanent link:
https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x300:lower_spindle_key&rev=1664096780

Last update: **2022/09/25 11:06**

