

The machine does not initialise

Check the following:

1. Is the power cord connected between your wall outlet and the X-300 socket ?
2. Does your wall outlet supply power? In other words is there a circuit breaker off ?
3. Are the two glass fuses inside the main filter still OK? They sit just near the power cord socket.
4. When switching on the machine, do you hear the fan and do you hear the motors locking? If not, the power switch might be defective.
5. Or the 48 VDC power supply might be defective.
6. Does your

From:

<https://manualscyborg-engraverscom.webhosting.be/> - cyborg-engravers

Permanent link:

https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x300:machine_not_initializing&rev=1664371178

Last update: **2022/09/28 15:19**

