

Move back / Move forward x times



	If you push this key during an engraving job, the spindle will lift and move back either one vector or one character, depending upon the software used.
	If you push this key during an engraving job, the spindle will lift and move back either ten vectors or ten characters, depending upon the software used.
	If you push this key during an engraving job, the spindle will lift and move back either 25 vectors or 25 characters, depending upon the software used.
	If you push this key during an engraving job, the spindle will lift and move forward either one vector or one character, depending upon the software used.
	If you push this key during an engraving job, the spindle will lift and move forward either ten vectors or ten characters, depending upon the software used.
	If you push this key during an engraving job, the spindle will lift and move forward either 25 vectors or 25 characters, depending upon the software used.

From:

<https://manualscyborg-engraverscom.webhosting.be/> - cyborg-engravers

Permanent link:

https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x300:move_back-forward_x_times&rev=1641475115

Last update: 2022/01/06 14:18

