

# Move back / Move forward x times



|                                                                                     |                                                                                                                                                                   |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | If you push this key during an engraving job, the spindle will lift and move <b>back</b> either one vector or one character, depending upon the software used.    |
|    | If you push this key during an engraving job, the spindle will lift and move back either ten vectors or ten characters, depending upon the software used.         |
|    | If you push this key during an engraving job, the spindle will lift and move back either 25 vectors or 25 characters, depending upon the software used.           |
|    | If you push this key during an engraving job, the spindle will lift and move <b>forward</b> either one vector or one character, depending upon the software used. |
|   | If you push this key during an engraving job, the spindle will lift and move forward either ten vectors or ten characters, depending upon the software used.      |
|  | If you push this key during an engraving job, the spindle will lift and move forward either 25 vectors or 25 characters, depending upon the software used.        |

From:  
<https://manualscyborg-engraverscom.webhosting.be/> - cyborg-engravers

Permanent link:  
[https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x300:move\\_back-forward\\_x\\_times&rev=1664093387](https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x300:move_back-forward_x_times&rev=1664093387)

Last update: 2022/09/25 10:09

