

Move back / Move forward x times

	If you push this key during an engraving job, the spindle will lift and move back either one vector or one character, depending upon the software used.
	If you push this key during an engraving job, the spindle will lift and move back either ten vectors or ten characters, depending upon the software used.
	If you push this key during an engraving job, the spindle will lift and move back either 25 vectors or 25 characters, depending upon the software used.
	If you push this key during an engraving job, the spindle will lift and move forward either one vector or one character, depending upon the software used.
	If you push this key during an engraving job, the spindle will lift and move forward either ten vectors or ten characters, depending upon the software used.
	If you push this key during an engraving job, the spindle will lift and move forward either 25 vectors or 25 characters, depending upon the software used.

Return to [the keypad overview](#).

Continue to [the table of contents](#).

From:
<https://manualscyborg-engraverscom.webhosting.be/> - **cyborg-engravers**

Permanent link:
https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x300:move_back-forward_x_times&rev=1664093829

Last update: **2022/09/25 10:17**

