

Diagonal jogging keys

Jog to the left (X-) and to the back (Y+)

Press the key to jog the spindle to the left and to the rear simultaneously. The jog speed is determined by the jog speed bar setting.

Jog to the right (X+) and to the back (Y+)

Press the key to jog the spindle to the right and to the rear simultaneously. The jog speed is influenced by the jog speed bar setting.

Jog to the left (X-) and to the front (Y-)

Press the key to jog the spindle to the left and to the front simultaneously. The jog speed is determined by the jog speed bar setting.

Jog to the right (X+) and to the front (Y-)

Press the key to jog the spindle to the right and to the front simultaneously. The jog speed is influenced by the hot key setting.

Return to the keypad overview. Continue to the table of contents.

From:

<https://manualscyborg-engraverscom.webhosting.be/> - **cyborg-engravers**

Permanent link:

https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x300:park_x-y&rev=1664305887

Last update: **2022/09/27 21:11**

