

Diagonal parking keys

	+	Jog to the left (X-) and to the back (Y+) Press the  key to jog the spindle to the left and to the rear simultaneously. The jog speed is determined by the jog speed bar setting.
	+	Jog to the right (X+) and to the back (Y+) Press the  key to jog the spindle to the right and to the rear simultaneously. The jog speed is influenced by the jog speed bar setting.
	+	Jog to the left (X-) and to the front (Y-) Press the  key to jog the spindle to the left and to the front simultaneously. The jog speed is determined by the jog speed bar setting.
	+	Jog to the right (X+) and to the front (Y-) Press the  key to jog the spindle to the right and to the front simultaneously. The jog speed is influenced by the hot key setting.
	+	Jog to the right (X+) and to the front (Y-) Press the  key to jog the spindle to the right and to the front simultaneously. The jog speed is influenced by the hot key setting.
	+	Jog to the right (X+) and to the front (Y-) Press the  key to jog the spindle to the right and to the front simultaneously. The jog speed is influenced by the hot key setting.

Return to [the keypad overview](#).

Continue to [the table of contents](#).

From:

<https://manualscyborg-engraverscom.webhosting.be/> - cyborg-engravers

Permanent link:

https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x300:park_x-y&rev=1664306193

Last update: 2022/09/27 21:16

