

Diagonal parking keys

 + 	Park the spindle in the upper left corner Press the  +  keys to park the spindle to the left and to the rear simultaneously.
 + 	Park the spindle in the upper right corner Press the  +  key to park the spindle to the right and to the rear simultaneously.
 + 	Park the spindle in the lower left corner Press the  +  key to park the spindle to the left and to the front simultaneously.
 + 	Park the spindle in the lower right corner Press the  +  key to park the spindle to the right and to the front simultaneously.

Return to [the keypad overview](#).

Continue to [the table of contents](#).

From:

<https://manuals.cyborg-engravers.com/> - cyborg-engravers

Permanent link:

https://manuals.cyborg-engravers.com/doku.php?id=en:x300:park_xy

Last update: 2023/05/17 10:05

