

## Parking keys

|                                                                                                                                                                           |                                                                                                                                                                                                                                                                                           |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  +      | <b>Park the spindle in the rear</b><br>Press the  +  keys to park the spindle to the rear of the engraving table.       |
|  +      | <b>Park the spindle to the right</b><br>Press the  +  keys to park the spindle to the right of the engraving table.     |
|  +      | <b>Park the spindle to the left</b><br>Press the  +  key to park the spindle to the left of the engraving table.        |
|  +  | <b>Park the spindle in the front</b><br>Press the  +  key to park the spindle to the front of the engraving table.. |

Return to [the keypad overview](#).  
Continue to [the table of contents](#).

From:  
<https://manualscyborg-engraverscom.webhosting.be/> - cyborg-engravers

Permanent link:  
<https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x300:parking&rev=1664309267>

Last update: 2022/09/27 22:07

