

Move spindle up

Press and hold the Z-AXIS JOG ARROW to raise the spindle. Press the JOG SPEED key to change the jogging speed.

From:

<https://manualscyborg-engraverscom.webhosting.be/> - **cyborg-engravers**

Permanent link:

https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x300:raise_spindle_key&rev=1664096110

Last update: **2022/09/25 10:55**

