

Move spindle up



Press and hold the Z-AXIS JOG ARROW  to raise the spindle.

Press the JOG SPEED  key to change the jogging speed.

Return to [the keypad overview](#).
Continue to [the table of contents](#).

From:
<https://manualscyborg-engraverscom.webhosting.be/> - **cyborg-engravers**

Permanent link:
https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x300:raise_spindle_key&rev=1664096288

Last update: **2022/09/25 10:58**

