

Move spindle up



Press and hold the Z-AXIS JOG ARROW to raise the spindle.

Use the jog speed bar to change the speed. Click on the rabbit or on the turtle, or click on the dial.

Return to [the keypad overview](#).

Continue to [the table of contents](#).

From:

<https://manualscyborg-engraverscom.webhosting.be/> - **cyborg-engravers**

Permanent link:

https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x300:raise_spindle_key&rev=1664096465

Last update: **2022/09/25 11:01**

