

# Move spindle up



Press and hold the Z-AXIS JOG ARROW  to raise the spindle.

Use the jog speed bar to change the speed



. Click on the rabbit or on the turtle, or click on the dial.

**Return to [the keypad overview](#).**

**Continue to [the table of contents](#).**

From:  
<https://manualscyborg-engraverscom.webhosting.be/> - cyborg-engravers

Permanent link:  
[https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x300:raise\\_spindle\\_key&rev=1664096665](https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x300:raise_spindle_key&rev=1664096665)

Last update: 2022/09/25 11:04

