

Resuming or Restarting the engraving job

To start an engraving job, that job has to be loaded in the virtual pendent's memory. When that is the case, its name is visible in the virtual pendent's central status bar.



To start the job, click on the Start icon. After having clicked this icon the job starts and the Pause icon is being displayed in stead of the Start icon.



To pause the job anywhere, click on the Pause icon. After having clicked this icon the job pauses and the Resume icon is being displayed in stead of the Pause icon.



To resume the job, click the Resume icon. The job continues where it was paused and the Resume icon is replaced by the Pause icon again.

Continue to [the table of contents](#).

From:
<https://manualscyborg-engraverscom.webhosting.be/> - cyborg-engravers

Permanent link:
https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x300:restarting_job_console&rev=1663791900

Last update: 2022/09/21 22:25

