


Spindle rotates or does not rotate

Depending upon the kind of tool the spindle motor has to rotate or not.

For normal engravings the spindle should always be rotating, but when diamond scratching in metals, the spindle motor should not rotate.

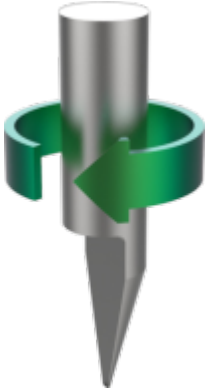

If this icon is shown on the virtual pendent, The spindle will rotate. It will automatically start and stop at the end of every engraving job.



If this icon is shown on the virtual pendent, every character or vector will be engraved in the preprogrammed direction. At the end of each character the spindle will stay down in the material and run through the character again in the opposite direction.

Return to [the keypad overview](#).

Continue to [the table of contents](#).

From:
<https://manualscyborg-engraverscom.webhosting.be/> - **cyborg-engravers**

Permanent link:
https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x300:rotation_on_off&rev=1664050756

Last update: **2022/09/24 22:19**

