

Set material surface



This function is used to identify and set the surface of the material.

Before using this key, you have to make sure the spring retainer ring is not locked.

The “set material surface” function can only be used if your pendant displays  or



Once the material surface is set you should not have to reset it again unless:

- a) the system has been shut off; or
- b) the material thickness has been changed.



Press the JOG ARROWS keys  to position the cutter anywhere over the material.

Press the SURFACE  key. This will open the following window:



You can now hit the

Return to [the keypad overview](#).
Continue to [the table of contents](#).

Last
update: en:x300:set_surface_key https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x300:set_surface_key&rev=1664369296
2022/09/28 14:48

From:
<https://manualscyborg-engraverscom.webhosting.be/> - **cyborg-engravers**

Permanent link:
https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x300:set_surface_key&rev=1664369296

Last update: **2022/09/28 14:48**

