

Move spindle down



Press and hold the Z-AXIS JOG ARROW  to lower the spindle.

Use the jog speed bar to change the speed



. Click on the rabbit or on the turtle, or click on the dial.

Return to [the keypad overview](#).

Continue to [the table of contents](#).

From:

<https://manualscyborg-engraverscom.webhosting.be/> - cyborg-engravers

Permanent link:

https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x300:shift_lower_spindle_key&rev=1664135177

Last update: 2022/09/25 21:46

