

# Move spindle down 1 mm



Press and hold the Z-AXIS JOG ARROW  to lower the spindle.

Use the jog speed bar to change the speed



. Click on the rabbit or on the turtle, or click on the dial.

**Return to [the keypad overview](#).**

**Continue to [the table of contents](#).**

From:

<https://manualscyborg-engraverscom.webhosting.be/> - cyborg-engravers

Permanent link:

[https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x300:shift\\_lower\\_spindle\\_key&rev=1664135214](https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x300:shift_lower_spindle_key&rev=1664135214)

Last update: 2022/09/25 21:46

