



Replacing the spindle belt

Important notes:

1. Since the belt between the spindle motor and the spindle is a timing belt, it is not necessary to tension the belt. The teeth on the belt will prevent slipping and hence loss of rpms.
2. The advantage of a non tensioned belt is also that the spindle motor bearings are not put under sideways pressure.

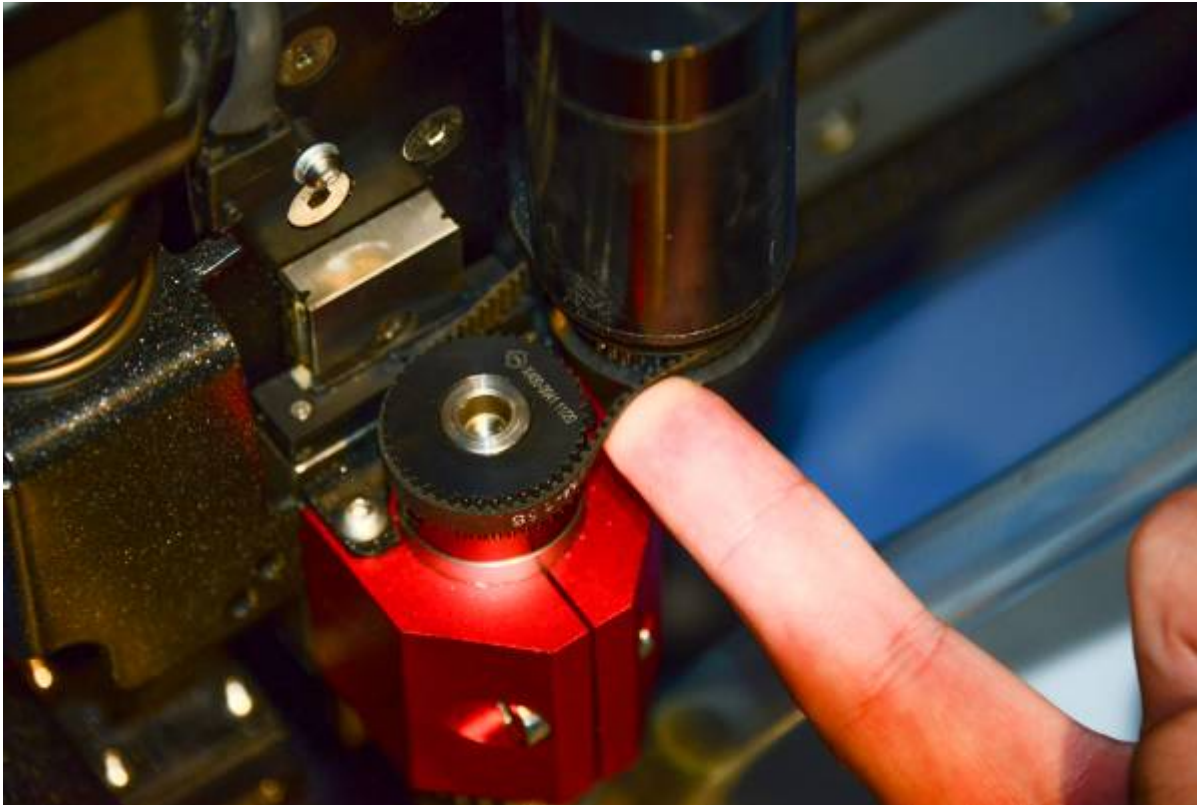

On the above image it is clearly visible that there is no strain on the timing belt.

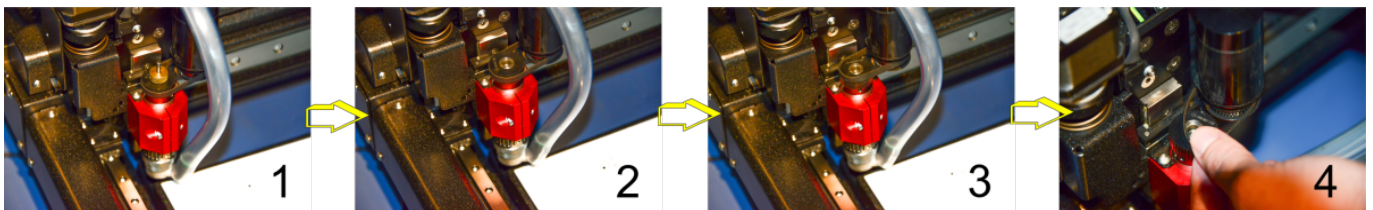

1. Spindle with cutter and cutter knob
2. spindle with cutter and cutter knob removed
3. Rotate spindle clockwise and simultaneously move the belt up on the spindle pulley
4. Finally the timing belt will come off the spindle pulley.

Continue to [Configuring the pc ethernet port.](#)
Continue to [the table of contents.](#)

Last
update: en:x300:spindle_belt_replacement https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x300:spindle_belt_replacement&rev=1664367279
2022/09/28 14:14

From:
<https://manualscyborg-engraverscom.webhosting.be/> - **cyborg-engravers**

Permanent link:
https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x300:spindle_belt_replacement&rev=1664367279

Last update: **2022/09/28 14:14**

