

Spindle Test

The Spindle Test will test the controller output to the Spindle Motor. The spindle motor will stay active until the key is pressed again.

Activating Spindle Test

Press the SPINDLE TEST hot key.

Keypad Display “Activating Spindle”

Press SPINDLE TEST again stops the Spindle Test.

Note:

Pressing the CANCEL hot key will also stop the spindle test.

From:
<https://manualscyborg-engraverscom.webhosting.be/> - **cyborg-engravers**

Permanent link:
https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x300:spindle_test_key&rev=1641475116

Last update: **2022/01/06 14:18**

