

Spindle Test



The Spindle Test will test the controller output to the Spindle Motor. The spindle motor will stay active until the key is pressed again.

Activating Spindle Test

Press the SPINDLE TEST  key.

Keypad Display “Activating Spindle”

Press SPINDLE TEST  again stops the Spindle Test.

Note:

Pressing the CANCEL  key will also stop the spindle test.

Return to [the keypad overview](#).
Continue to [the table of contents](#).

From:
<https://manualscyborg-engraverscom.webhosting.be/> - **cyborg-engravers**

Permanent link:
https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x300:spindle_test_key&rev=1664310849

Last update: **2022/09/27 22:34**

