

System Requirements

Hardware requirements

You can use any PC or laptop with a Windows operating system as a server for your Cyborg X-300. Your pc has to have the following components / features:

- a free and working Ethernet port.
- a two button mouse and a keyboard.
- a monitor with minimum HD resolution.
- Sufficient free hddisk space.
- a free USB port.

The operating system

Any of the following windows platforms is supported:

- Windows 7 and 8 professional.
- Windows 10 professional.
- Windows 11 professional.

The Switch

If the Cyborg X-300 has to be integrated in a LAN (local area network), you will need to put a second Ethernet port, dedicated to the X-300 in your pc.

Continue to [Configuring the pc ethernet port](#).
Continue to [the table of contents](#).

From:
<https://manualscyborg-engraverscom.webhosting.be/> - **cyborg-engravers**

Permanent link:
https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x300:system_requirements&rev=1669736671

Last update: **2022/11/29 16:44**

