

# Cyborg X-300 Desktop Engraver - Table of Contents

---

## Introduction

- [General introduction - Safety Instructions](#)
  - Safety before all – General safety instructions
  - List of warning, mandatory and prohibition signs
  - Warning labels
  - Machine label
- [Technical Specifications](#)
- [Handling and use](#)

## Chapter 1 - Getting started

### 1.1. Features

- 1.1.1. Rotary engraving
- 1.1.2. Diamond scratching

### 1.2 Component names and functions

- 1.2.1. Front view
- 1.2.2. Rear view
- 1.2.3. Virtual keypad

## Chapter 2 - Installation and setup

### 2.1. Installation environment

### 2.2. Unpacking

- 2.2.1. Unpacking
- 2.2.2. Checking the contents of the box

### 2.3. Cable connections

- 2.3.1. Checking the supply voltage
- 2.3.2. Connecting the power cable
- 2.3.3. Connecting the X-300 to your computer or network

## 2.4. Installing and setting up the software

- [2.4.1. System requirements](#)
- [2.4.2. Configuring the PC's ethernet port](#)
- [2.4.3. Installing the Cyborg virtual pendent](#)
- [2.4.4. Registering and starting the Cyborg pendent software](#)
- [2.4.5. Installing the "Symmetry" engraving software](#)
- [2.4.6. Using other third party software](#)

# Chapter 3 - Preparing and executing an engraving job

## 3.1. Switching the power on and off

- 3.1.1. Switching the power on
- 3.1.2. Switching the power off

## 3.2. Securing the engraving material onto the engraving table

- 3.2.1. Using the standard included flat engraving table
- 3.2.2. Using the "MultiMat" sheet
- 3.2.3. Using the optional "Auto centre vise"
- 3.2.4. Using the optional "Vacuum table"

## 3.3. Setting up a tool

- 3.3.1. How to use the cutter calibration stand
- 3.3.2. Installing an engraving tool
- 3.3.3. Installing a scoring tool
- 3.3.4. Installing a diamond scratch tool
- 3.3.5. How to remove a tool from the spindle

## 3.4. Setting the engraving depth

- 3.4.1. Calibrating and using the depth regulator nose
  - [3.4.1.1. Calibrating the depth regulator nose and the calibration stand](#)
  - [3.4.1.2. Using the depth regulator nose](#)
    - in combination with Auto Z control
    - without Auto Z control
- [3.4.2. Use of the spindle pressure spring](#)
  - 3.4.3.1. Locking the pressure spring for engraving without depth regulator nose
  - 3.4.3.2. Auto plate surfacing with unlocked spring and engraving with locked spring
  - 3.4.3.3. Surface mapping with unlocked spring and engraving uneven surfaces with locked spring

### 3.5. How to cut materials

- 3.5.1. [Materials rotation speed and feed](#)
- 3.5.2. [Two-way engraving metals](#)
- 3.5.3. [Adjusting feeds and speeds](#)
- 3.5.4. [Pause button](#)
- 3.5.5. [Cancelling the engraving job](#)
- 3.5.6. [Restarting the engraving job](#)

### 3.6. Controlling the X-300 using the 'virtual keypad'

- 3.6.1. [Keypad overview](#)
  - Introduction - General overview
  - Function keys
  - Settings screen
- 3.6.2. [Setting and saving origin points](#)
- 3.6.3. [Choosing Z modes](#)

## Chapter 4 - Maintenance and cleaning

### 4.1. Cleaning - a must to prolong your machine's lifetime

### 4.2. Periodical maintenance

- 4.2.1. [daily maintenance](#)
- 4.2.2. [weekly maintenance](#)
- 4.2.3. [monthly maintenance](#)
- 4.2.4. [annual maintenance](#)

### 4.3. Advanced maintenance

- 4.3.1. [Replacing the spindle belt](#)
- 4.3.2. [Tensioning the timing belts](#)
- 4.3.3. [Removing the machine covers](#)

## Chapter 5 - Troubleshooting

### 5.1. The machine does not initialize

### 5.2. The spindle does not rotate

### 5.3. The engraving results are poor

### 5.4. No connection between machine and computer

## Chapter 6 - Options

- 7.1. Vacuum converter
  - 7.2. Self centering vise
  - 7.3. Jigs for the clamping vise
  - 7.4. Output signal for switching on and off an external device at the beginning and the end of a job
  - 7.5. Output signal for switching on and off an external device at every spindle up/down move
- 

## Appendices

**A. Thesaurus: a glossary with specific terms about all things computerized engraving as being used in this manual.**

**B. G-code and M-code protocol for the Cyborg controller.**

From:  
<https://manualscyborg-engraverscom.webhosting.be/> - **cyborg-engravers**

Permanent link:  
[https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x300:table\\_of\\_contents&rev=1664370056](https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x300:table_of_contents&rev=1664370056)

Last update: **2022/09/28 15:00**

