

Move spindle down



Press and hold the Z-AXIS JOG ARROW  to lower the spindle.

Use the jog speed bar to change the speed



. Click on the rabbit or on

the turtle, or click on the dial.

Return to [the keypad overview](#).

Continue to [the table of contents](#).

From:

<https://manuals.cyborg-engravers.com/> - **cyborg-engravers**

Permanent link:

https://manuals.cyborg-engravers.com/doku.php?id=es:x300:lower_spindle_key

Last update: **2022/09/25 11:31**

