

Option de menu "Autocadrage" (F5)

La méthode **Autocadrage** permet à l'utilisateur de créer une mise en page avec plusieurs lignes de texte rapidement. Elle fera en sorte que les textes seront distribués d'une manière équilibrée en fonction de la taille de la plaque disponible. L'opérateur peut adapter l'espacement des marges et ajuster le pourcentage de l'occupation du texte, en déterminant la hauteur de ligne idéale et l'espacement entre les lignes. Cette fonction est particulièrement utile pour des pendentifs ou plaques siganlétiques avec une zone spécifique où la gravure doit être positionnée.

Image écran "Autocadrage"

The screenshot shows the 'Autoplate' dialog box with the following sections:

- Plate Dimensions:** Width: 120.00 mm, Height: 100.00 mm.
- Number of Lines:** 3.
- New or Existing Lines?:** Are these changes to apply to the existing lines in your layout or to be added as new additional lines?
 - ☒ Create Layout
 - ☐ Add these lines to existing layout
- Apply Changes?:** Yes, No.
- Line Details:**
 - Text Occupies: 44.00 %
 - Margin Percent: 10.00 %
 - Top Margin: 0.00 mm
 - Bottom Margin: 0.00 mm
 - Left Margin: 6.10 mm
 - Right Margin: 6.10 mm
- Line Details Table:**

Line	Ratios	Line Ht	Locked
1	1.00	14.67	☐
2	1.00	14.67	☐
3	1.00	14.67	☐
- Preview:** A black rectangular area on the right showing three white horizontal bars representing text lines.

The dialog allows the user to configure the size of the plate, and the number of lines. The **Line Details** section Individual line heights can be tweaked through the line details table at the bottom by either adjusting the ratio value of the line or locking in a specific line height. Unless the tick box at the bottom is ticked, the autoplate will reformat any existing lines on the plate to suit the new layout defined. The preview pane on the right will update to reflect the changes made.

Line details

- **Text Occupies (%)**:

The percentage in height covered by sum of the heights of the text lines in comparison with the total plate height.

For example, if your plate is 60 mm high, the "**Text Occupies**" value is 50%, the sum of the line heights will always remain 30 mm (50% of 60 mm). 3 lines of equal height will be 10 mm each.

- **Margin Percent (%)**:

The percentage of the left and right margins' widths in comparison with the plate width.

A Margin percent of 10% on a sheet of 100 mm wide will result in a left and right margin of 10 mm each.

- **Top Margin**
- **Bottom Margin**
- **Left Margin**
- **Right Margin**

Line details table

- **Line:**
- **Ratios**
- **Line Ht**
- **Locked** (checkbox)

Access through...

- the **[F5]** function key on the keyboard
- the **Autoplate** shortcut  in the shortcut lists on the left
- the **Plate** menu and selecting **Autolayout**.

From:
<https://manualscyborg-engraverscom.webhosting.be/> - **cyborg-engravers**

Permanent link:
https://manualscyborg-engraverscom.webhosting.be/doku.php?id=fr:symmetry:option_autoplate&rev=1663163194

Last update: **2022/09/14 15:46**

