

# Option de menu "Préférences"

## The Preferences window

Variables and values that can be changed through the **Preferences** window:



- **Language:** Opens a drop-down menu showing all available languages. At this time, the following languages are available:
  - English
  - French (Français)
  - Dutch (Nederlands)
- **Units:**
  - Metric (mm)
  - Imperial (Inches)

The **Plate defaults:**

- **Width**
- **Height,** the standard Width and Height that will be shown as the **Plate Dimensions** in the **Autoplate** screen, as well as the standard dimensions when starting a **New Job**.
- Baseline
- **Text occuppies** (expressed in %): the standard percentage of the total plate surface which will be covered by the text lines.
- **Margin percent** (expressed in %): the standard percentage of the total plate surface which will be
- Text height
- Margins
- **Number of lines:** the standard number of lines when activating the **Autoplate** option.
- **Condensation** refers to the standard **Condense Mode** setting.

## Access through

- Startup screen - Preferences
- File menu - **"Preferences"** option

From:  
<https://manualscyborg-engraverscom.webhosting.be/> - cyborg-engravers

Permanent link:  
[https://manualscyborg-engraverscom.webhosting.be/doku.php?id=fr:symmetry:option\\_preferences&rev=1663157280](https://manualscyborg-engraverscom.webhosting.be/doku.php?id=fr:symmetry:option_preferences&rev=1663157280)

Last update: 2022/09/14 14:08

