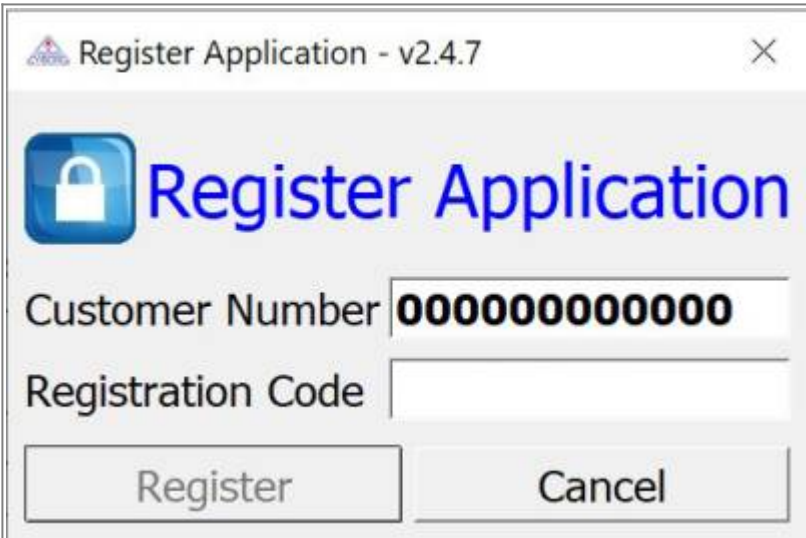
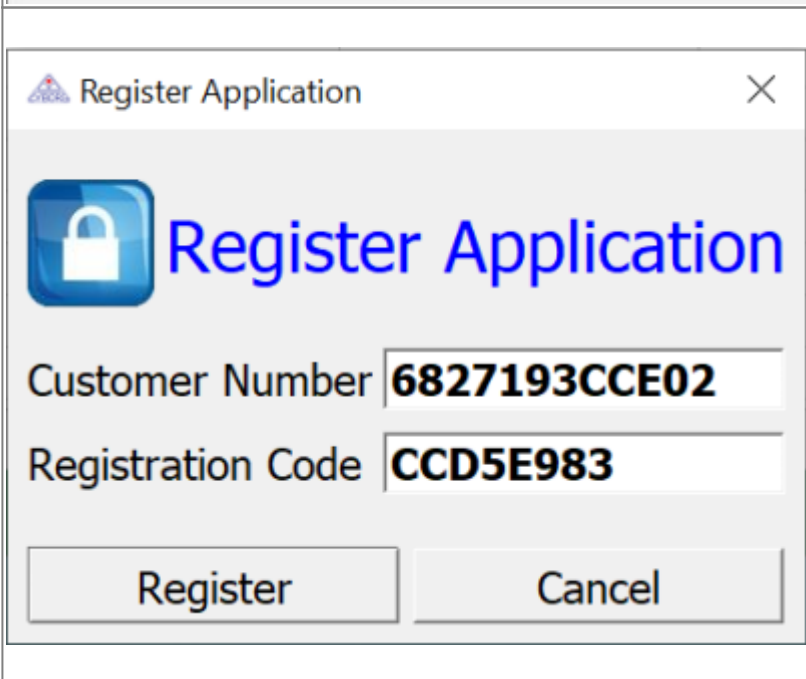


# Enregistrement et démarrage du logiciel "Cyborg pendent".

## Enregistrement du logiciel Cyborg pendent

Afin de pouvoir utiliser le logiciel pendent, celui-ci doit être enregistré. Dans la barre supérieure du logiciel Cyborg pendent, cliquez (touche droite de la souris) sur le « ? », puis sur l'option de menu « register ».

|                                                                                                                                                                                                                                                                                                                                                                                                                                           |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  <p>The screenshot shows a window titled "Register Application - v2.4.7". It features a blue padlock icon and the text "Register Application" in large blue letters. Below this, there are two input fields: "Customer Number" containing "000000000000" and "Registration Code" which is empty. At the bottom are "Register" and "Cancel" buttons.</p> | <p>Si une fenêtre comme celle de gauche apparaît, c'est qu'il y a un problème avec votre connexion Ethernet ou avec le câble Ethernet, ou que le X-300 n'est pas allumé.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|  <p>The screenshot shows a window titled "Register Application". It features a blue padlock icon and the text "Register Application" in large blue letters. Below this, there are two input fields: "Customer Number" containing "6827193CCE02" and "Registration Code" containing "CCD5E983". At the bottom are "Register" and "Cancel" buttons.</p>  | <p>Lorsque la connexion Ethernet entre votre ordinateur et le Cyborg X-300 a été correctement configurée et que le Cyborg X-300 a été allumé, la fenêtre d'enregistrement affichera. l'adresse mac de la machine se trouve dans le champ « Customer Number ». Il s'agit d'un code unique lié au contrôleur CNC X-300. Sur la clé USB fournie avec votre machine, vous trouverez le code d'accès que vous devrez introduire dans le champ « Code d'enregistrement ». Voici à gauche un exemple de fenêtre "Register Application" avec un code d'enregistrement correct : Si votre code d'enregistrement est correct, le logiciel l'acceptera et vous pourrez utiliser le logiciel.</p> |

## Starting the virtual pendent software



After having installed and registered the Cyborg pendent software, this new icon will appear on your desktop.

Double click on the icon and the virtual Cyborg keypad will be opened. Position it on the right hand side of your computer screen so that it fills the complete display height.

Over the virtual pendent you will see a little window in which the following message is displayed: "I have read and understood the Operator's Manual".




You will have to click the OK button to be able to work with the virtual pendent.

This message is important!

By clicking OK you testify that you have actually read and that you have completely understood the contents of this manual.

Hence, if you have not read, or if you have not fully understood this entire manual, you should not click this OK button. If you have read and understood this manual, click the OK button.

After having done so, the window with the warning message disappears.

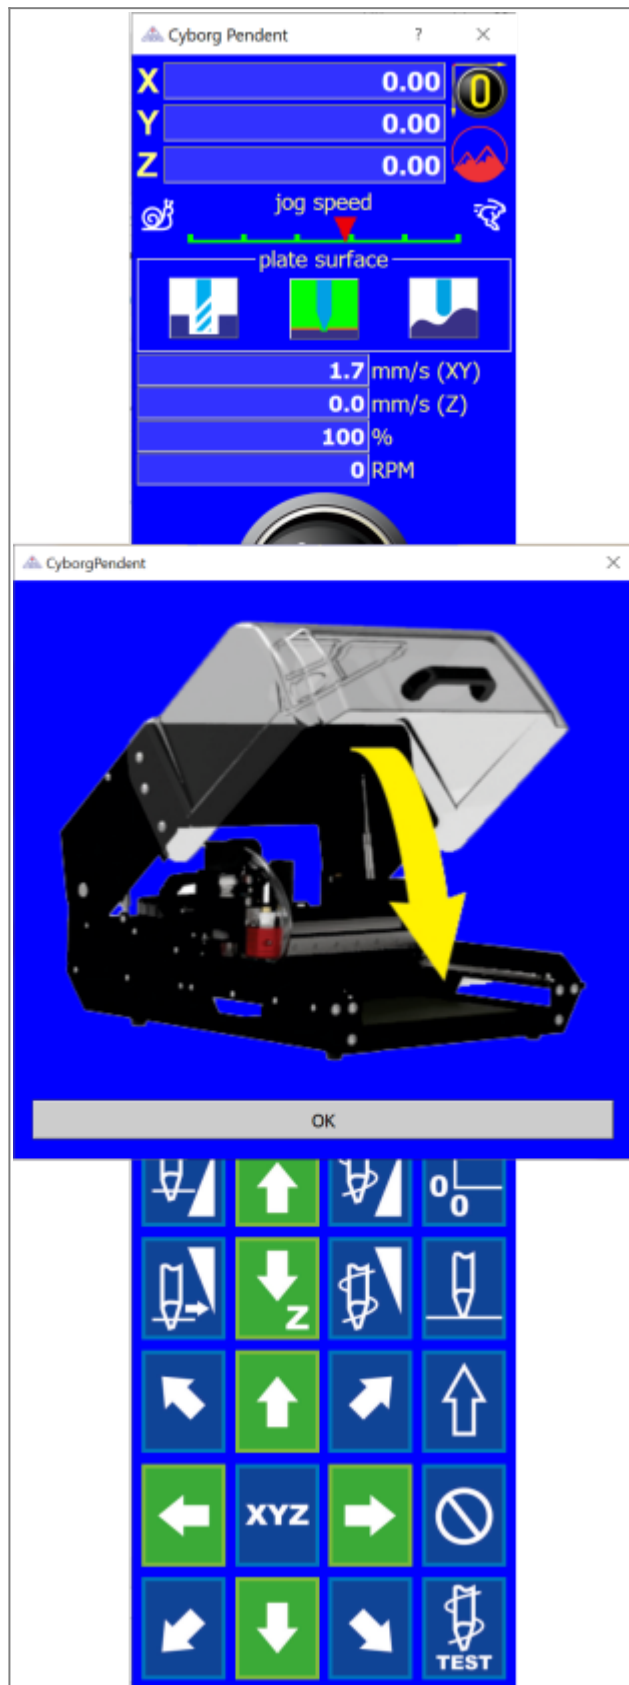

Before you can actually use the machine to engrave you will have to home it.  
In other words the machine has to find its limits and position itself over the top left corner of the engraving table. That is where the home position is.  
The home position is indicated with the coordinates (0,0).

To home the machine press the  (shift) and the  (go home) keys one after another.  
If the machine's protective cover was not closed when you try to home, the following will appear on your computer screen (see image on the left):

Close the protective cover, the bitmap with the yellow arrow will disappear and you can restart the homing cycle by pushing  and  again.

If you click OK without having closed the protective cover, the window with the image to close the lid will also disappear, but it will be displayed again when you re-try to home the machine.

Hence remember that you can only home the machine with the protective cover closed.

**Continue to [the installation of the Symmetry engraving software](#)**  
**Continue to [the table of contents](#).**

From:  
<https://manualscyborg-engraverscom.webhosting.be/> - **cyborg-engravers**

Permanent link:  
[https://manualscyborg-engraverscom.webhosting.be/doku.php?id=fr:x300:pendent\\_registration&rev=1701263767](https://manualscyborg-engraverscom.webhosting.be/doku.php?id=fr:x300:pendent_registration&rev=1701263767)

Last update: **2023/11/29 14:16**

