

Snelstart Wizard

Quick Start Wizard

AUTOPLATE **TEMPLATE**

Plate Dimensions

Width: mm

Height: mm

Number of Lines

New or Existing Lines?

Are these changes to apply to the existing lines in your layout or to be added as new additional lines?

☐ Create Layout

☐ Add these lines to existing layout

Line Details

Text Occupies: %

Margin Percent: %

Top Margin: mm

Bottom Margin: mm

Left Margin: mm

Right Margin: mm

Line	Ratios	Line Ht	Locked
1	1.00	14.68	☐
2	1.00	14.68	☐
3	1.00	14.68	☐

Apply Changes?

☒ Show this dialog again when starting a new job?

Auto-Plate can be accessed at any time by pressing F5 on your keyboard or by accessing it from the Plate Menu

llingen in Symmetry zal het “Snelstart Wizard” wenster geopend worden wanneer Symmetry wordt opgestart, of wanneer u de menukeuze “**Nieuwe Job**” selecteert. Het **Snelstart**-scherm laat de operator toe om de basisinstellingen vna uw graveerjob in te stellen, bv. de plaatafmetingen te configureren, het standaard aantal tekstregels op een plaat, enz. Of u kan het ‘Template’ tabblad openen en zo toegang krijgen tot een aantal vooraf meegeleverde sjablonen die u kan gebruiken.

The Quick Start window contains two tabs: **Autoplate (1)** and **Template (2)** (see image below).

- The **Autoplate** tab will be the first one to appear.
- The **Template** tab is only accessible through the **Quick Start Wizard** window, by clicking on the tab title.

When over time, you feel confident enough to create new jobs and layouts without using any of these two features and you prefer to start new jobs from a blank sheet, you can turn the **Quick Start Wizard** off by unchecking the checkbox at the bottom of the **Quick Start Wizard** screen.

From:
<https://manualscyborg-engraverscom.webhosting.be/> - cyborg-engravers

Permanent link:
https://manualscyborg-engraverscom.webhosting.be/doku.php?id=nl:symmetry:quick_start_wizard&rev=1651754285

Last update: 2022/05/05 14:38

